

Heated Seats - Quick Start Guide

Congratulations on your new Heated Seats!

Heated Seats Operation

- Your vehicle must be running in order to use your heated seats. This preserves the battery.
- The heated seat switches in most cases will be mounted on the center console. Some applications will have the switches mounted on the sides of the seats.
- The switch has 3 settings: Low, High, and Off
- There is a LED on the switch that will illuminate telling you that your seat heater is active.
- Warranty on New Car Installation: 3-year or 36,000 miles
- Warranty on Used Car Installation: Used vehicles will carry the balance of the 3-year 36,000 mile warranty OR a 1 year 12,000 mile warranty, whichever is greater.

Questions with your Heated Seats?

Please call 508-832-9816

