Features, Operation and Maintenance Audiovox ACAM350 Backup Monitor

Features:

- 3.5" TFT color LCD display
- Flexible mounting pad with 3M tape monitor mounts on either vehicle windshield or dashboard
- Rearview camera input
- Automatically displays backup camera image when vehicle is in reverse

Operation:

The monitor will automatically display the rear observation camera image whenever the vehicle is engaged in reverse.

Maintenance:

Though your Monitor requires little care, you can still maintain its condition and performance following the procedures below.

- Keep your system away from excessive moisture, extreme heat or cold and magnetic fields.
- Keep liquids away from the display monitor.
- To avoid damage, do not place auxiliary devices or other objects on the top of the monitor.
- Occasionally clean the surface of the monitor with soft cloth moistened with water or window cleaner.

Troubleshooting the Audiovox ACAM350 Backup Monitor	
What do I do if no video signal appears while reversing the vehicle on the Audiovox ACAM350?	 Check the rear view camera lens and clean if needed. Check the rear view camera wiring and connection.
What do I do if video image is not sharp enough on the Audiovox ACAM350?	• Clean the camera lens
What do I do if the Monitor is not on after the vehicle is started and vehicle is in reverse on the Audiovox ACAM350?	Check the monitor and the receiver wiring and connection.
What do I do if the monitor is very dark or the image changes slowly on the Audiovox ACAM350?	 In extreme cold or hot conditions the LCD screen may react slowly. This is normal and will clear as the vehicle warms or cools to a normal temperature.