

Using the System

- The LCDM40 is installed in conjunction with an Advent reverse safety camera.
- The LCDM40 will automatically turn on when the vehicle is placed in Reverse. You can activate the monitor at any time by pressing the large front button on the mirror housing.
- Holding down the large front button will turn the system off.

Adjusting Settings

1. The reverse camera will automatically activate whenever the vehicle is placed in reverse gear.
2. The large front button can be used to manually turn the monitor on or off at any time. NOTE: Your camera must have power or no image will be seen. Some vehicles will only have power to the camera when in reverse.
3. To change between the 2 camera inputs (CAM1/CAM2) press the large control button again (Vehicle must be equipped with 2 cameras).
4. Pressing the MENU button scrolls through the settings available including VOLUME, BRIGHTNESS, AUTO BRIGHTNESS, CONTRAST, HUE, SATURATION, MIRROR, RESET, LANGUAGE, GUIDELINE (G1, G2, G3, OFF), GUIDELINE ADJUSTMENT. Use the + and – buttons to adjust the settings.
Note: Only CAM1 mode, the GUIDELINE item will be shown in the menu settings.
5. There are 3 guideline sizes for small, medium, large vehicles.
6. The guidelines can be moved sideways using the + and – buttons in “Guideline Adjustment” mode. Note: These lines are reference points ONLY; they do not show an exact distance.
7. The MIRROR option will allow you to reverse the image from either camera as required.
8. Pressing and Holding the large front button for 2 seconds shuts the system down.

Troubleshooting

Symptom	Solution
No power in the monitor	<ol style="list-style-type: none">1. Check that reverse power is attached to orange wire.2. Check that accessory power is attached to red wire.3. Check that black wire is attached to vehicle body (ground)4. Check fuse and if blown ONLY replace with a fuse of the same amperage.
No image from backup camera when vehicle placed in reverse	<ol style="list-style-type: none">1. Check that camera is functioning correctly2. Check that orange wire is attached to reverse power3. Check that backup camera is attached to input CAM1
Image is mirrored or requires adjustment	<ol style="list-style-type: none">1. All settings are adjusted by pressing on the MENU button
Sound can not be heard form Advent camera	<ol style="list-style-type: none">1. Increase volume through MENU button2. Ensure Camera is connected using supplied SVHS cable.3. Not all cameras have a microphone, insure your model does.